

PIX-200

Atomic Time Clock

Quick Start Guide

Setting the Time and Date

General Tips:

- **“Before You Start”** – *This part of the Operations Manual is critical to consult, prior to engaging in setting up the clock. This portion of the manual explains the clock’s control buttons, display, lever, and how to properly remove the cover & packing material.*
- **Entering Program Mode:** Remove the cover, and press the (+) and (E) buttons simultaneously for 2 seconds to enter the programming mode. The **“Set Up Pro9”** will appear on the screen. Use the (+) and (E) button to navigate through the menus and make appropriate changes.
- **Leaving the Program Mode:** Replace the cover to exit the program mode and return to normal operation. This will save whatever settings have been changed.

Setting the Time:

- Unlock and remove the cover. Make sure the AC adapter is plugged in.
- Press and hold the (+) and (E) buttons simultaneously until the setup program appears.
- The blinking pointer will be positioned under Mon/Time.
- Press (E) to enter the time-setting mode.
- While Hour is blinking, adjust with the (–) and (+) buttons. Press (E) to confirm.
 - *Please note, military time is displayed in the time setting mode, however the time display setting default is 12h (am/pm). To switch to 24 hr. display (military time) please consult the “others” menu, P2 option.*
- While Minute is blinking, adjust with the (–) and (+) buttons. Press (E) to confirm.
 - *Note: Seconds will start from 00 after entering a new Minute setting. Seconds will not reset to 00 if Minute setting is not changed.*
- The display will show the set time.
 - Press (E) to confirm and return to program mode (to continue programming)
 - or
 - Replace the cover to exit the program mode and return to normal operation.

Setting the Date:

- Press the (+) button to position the blinking pointer under Tue/Date.
- Press (E) to enter the date-setting mode.
- While Month is blinking, adjust with the (–) and (+) buttons. Press (E) to confirm.
- While Date is blinking, adjust with the (–) and (+) buttons. Press (E) to confirm.
- While Year is blinking, adjust with the (–) and (+) buttons. Press (E) to confirm.
- The display will return to the setup program mode.
- Replace the cover to exit the program mode and return to normal operation.

Please refer to the Operation Manual for further detail on other settings/options.

- Setting the Password
- Atomic Time Functionality (see appendix)
- Day Light Savings
- Print Options